

INSTALLATION FLOW METER

To replace the HIRO flow meters, loosen the union nuts and slide them back. Remove the flow meter by pulling it out radially. Install new seals.

CAUTION: The seals on the shut-off valve side and on the borehole connection side differ only slightly in size. Ensure that the correct seal is installed in each position.

Reinstall the flow meter by inserting it radially, making sure that the seal is seated correctly. Tighten the union nuts and, if necessary, use the installation wrench.

