




Installation Access Ladder

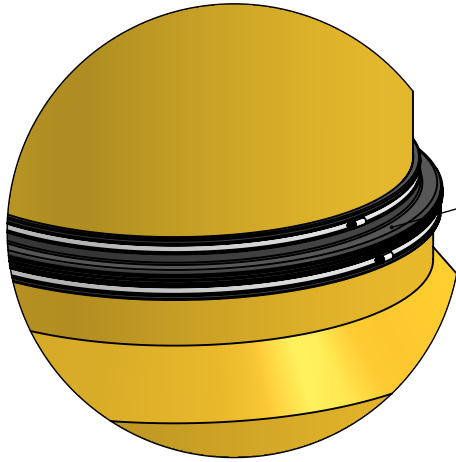


1. Fix the telescopic insert at the required installation height using the clamping ring.

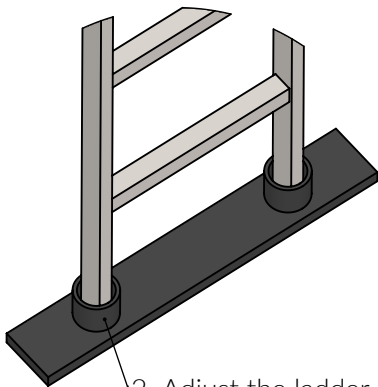

2. Adjust the ladder in the base plate and shorten it if necessary.

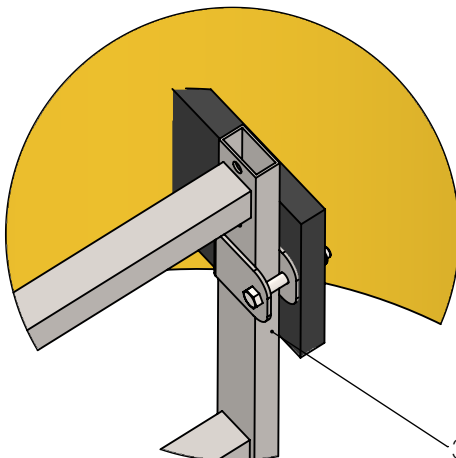

3. Insert the ladder into the retaining clamps from the front and secure it with screws.

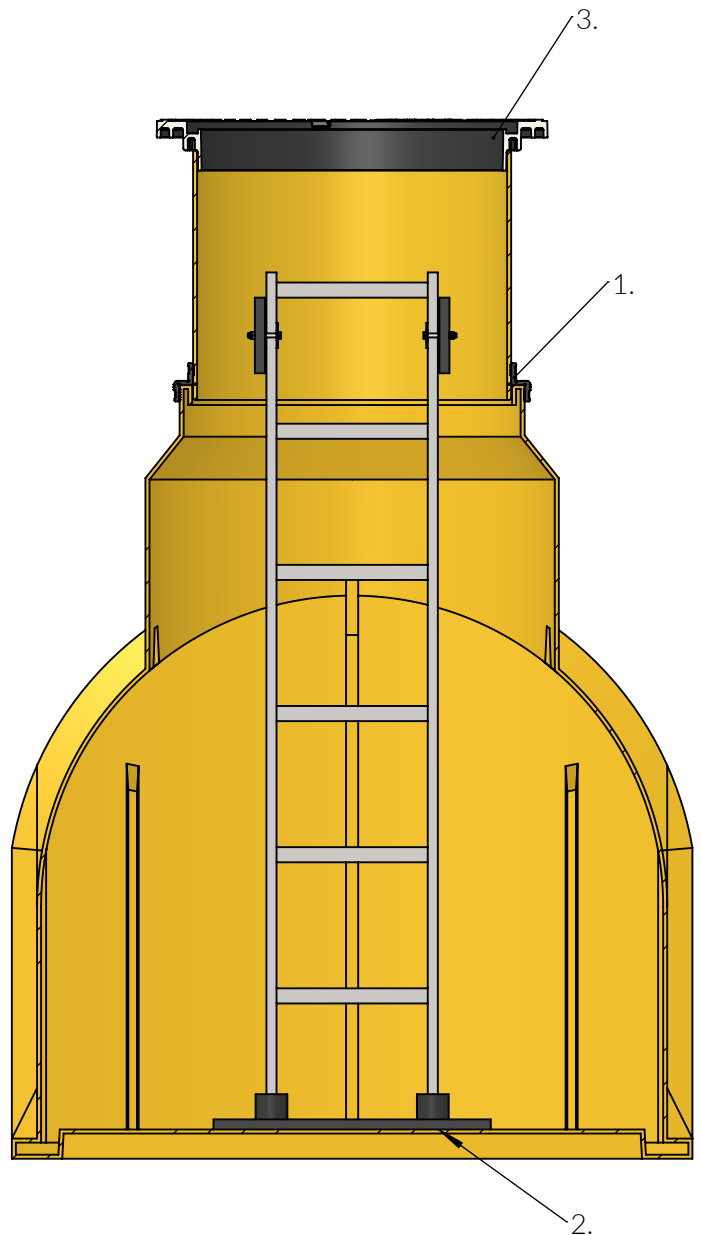



Installation Access Ladder Optional Entry Aid

The entry aid must be mounted behind the ladder.
The ladder, including the entry aid, must be installed so that, after being pulled out, it extends at least 1 m above the access surface.

Operation of the Entry Aid

Grasp the entry aid by the handle and pull it upward.
Move the locking hooks over the second rung of the ladder and place them onto the rung. Check that the entry aid is seated correctly. The entry aid is now ready for use.

Retracting the Entry Aid

Gently pull the entry aid slightly toward the wall using the handle and lift it. This releases the locking hooks from the rung. Tilt the entry aid so that the locking hooks do not touch the ladder rungs while retracting the entry aid.
Retract the entry aid until the handle rests in its designated position.

